

Washing machine

Adora SLQ



Operating instructions

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliance is reserved.

Symbols used



Denotes important safety precautions. Failure to observe said precautions can result in injury or damage to the appliance or fittings!

- ▶ Indicates step-by-step instructions.
 - Describes how the appliance reacts to the steps taken.
- Indicates a list.



Denotes useful tips for the user.

Validity

The model number corresponds to the first three digits on the identification plate. These operating instructions apply to the model:

Model	Type	Model no.
Adora SLQ	WA-ASLQ	267

Variations depending on the model are noted in the text.

Contents

Safety precautions	5
Before using for the first time	5
Correct use	6
Children in the home	7
Note on use	7
Maintenance	8
Your appliance	9
Appliance description	9
Construction	10
Operating and display elements	11
Using for the first time	13
Programme overview	14
Main programmes	14
Additional programmes	16
Additional functions	22
Favourites	23
User settings	26
Language	28
Time / Date	29
Rinsing	30
Soft water	31
Spin speed	32
Childproof lock	33
Automatic door opener	34
Restoring factory settings	35
Washing	36
Adding washing detergent	38
Programme selection	41
Changing selection	46
Programme selection with childproof lock activated	47
End of programme	48
End of the wash day	49

Care and maintenance	50
Cleaning the detergent dispenser drawer	50
Cleaning the water inlet filter	50
Emergency draining	51
Cleaning the foreign body trap	52
Trouble-shooting	53
What to do if	53
Opening the appliance door in the event of a power failure	60
Washing tips	61
Unsatisfactory wash results	63
Spare parts	67
Technical data	68
Note for testing institutes	69
VAS Vibration Absorbing System	70
Water and energy economy	70
Turbidity sensor	70
Automatic energy-saving stand-by	70
Disposal	71
Index	72
Repair service	75
Quick instructions	76

Safety precautions



The appliance corresponds to recognised technology standards and the relevant safety regulations. Proper use of the appliance is however essential to avoid damage and accidents. Please therefore follow the precautions given in these operating instructions.

In accordance with the requirements of IEC 60335-1:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or unless they have been given instruction concerning the use of the appliance by a person responsible for their safety.

Before using for the first time

- The appliance must be installed and connected to the electricity supply in accordance with the separate installation instructions. The necessary work should be carried out by a qualified fitter or electrician.
- Dispose of the packaging material in accordance with local regulations.
- Ensure access to the place of disconnection (e.g. socket outlet, wall switch, mains fuse) and the water tap.
- The transport lock must be removed. Failure to remove the transport lock can result in damage to the appliance or apartment or laundry room fittings.
- Before using the newly installed appliance for the first time, please follow the precautions given in the 'Using for the first time' section.

Correct use

- The appliance is suitable for washing home textiles with water and regular washing machine detergent. The appliance is designed for use in the home and for the above-mentioned purpose only. No liability is assumed for any damage caused by improper or incorrect use.
- Any repairs, modifications or manipulations to the appliance, especially any electrically live parts, should only be carried out by the manufacturer, its Customer Services or similarly qualified persons. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case of a repair order, follow the instructions given in the 'Repair service' section. If necessary, please contact Customer Services.
- Use original spare parts only.
- Retain these operating instructions for future reference. If you sell or pass the appliance on to a third party, please ensure these operating instructions accompany the appliance, together with the instructions on installation. In this way, the new owner can inform themselves about how to use the appliance correctly and read the pertinent safety precautions.

Do not use the appliance to wash the following:

- Textiles that have been cleaned, treated or soaked with flammable chemicals, detergents or solvents such as benzene, alcohol, stain remover, oil, paint, wax, etc. Fire or explosion hazard! Wash materials containing such substances first by hand with water or allow the solvent to evaporate completely.
- Textiles with metal reinforcements (risk of damage).
- Trainers, diving suits, rucksacks, carpets, etc.

Children in the home

- Packaging material (e.g. plastic, polystyrene) can be dangerous for children. Danger of suffocation! Keep packaging material away from children.
- The appliance is designed for use by adults who are familiar with these operating instructions. Children are often unable to recognise the danger of electrical appliances. Ensure proper supervision and do not allow children to play with the appliance – there is a danger that children could get locked inside.
- Washing detergent can irritate the eyes, mouth and throat and even cause choking! Keep washing detergent out of the reach of children.
- Use the childproof locking facility.

Note on use



Do not use the pivoting operating panel to lift or move the appliance.

- If the drain hose leads into a sink (wash trough), check that it is fastened securely. Make sure that the water can drain off fast enough. Flooding hazard!
- From time to time, check the drain hose for tears, kinks, twists, bends, etc.
- Do not use the appliance if visibly damaged or if the inlet pipes are damaged. Contact Customer Services.
- If the appliance is not operating properly, disconnect it from the electricity supply immediately.
- Keep pets away from the appliance.
- To protect your washing, follow the fabric care symbols and the hints and advice in the 'Washing tips' section!.
- Do not use solvents (e.g. turpentine, benzene) instead of, or in addition to, water, washing detergent or additives in your appliance. Fire or explosion hazard!

- Only use water softener, dye / bleach or other additives expressly recommended by the manufacturer for use in the appliance. Follow the manufacturer's instructions carefully.
- Store washing detergents, washing additives and other additives in a cool, dry place. Lumpy washing detergent can cause problems. Keep all washing detergents and additives out of the reach of children.
- Before closing the appliance door and starting a programme, ensure that there are no foreign objects or pets in the washing drum, detergent dispenser drawer or around the foreign body trap. Foreign objects such as coins, nails, paper clips, etc. can damage parts of the appliance, as well as the washing.
- During longer periods of absence, turn off the water tap before switching off the power by pulling out the mains plug. Never pull the mains plug out by the cable. Please note: the built-in overflow protection is rendered inactive when the power is switched off.

Maintenance



Ensure the washing drum has stopped moving before reaching inside. Do not touch the drum while it is still in motion – risk of serious injury!

- Disconnect the appliance from the mains before carrying out maintenance work.
- Do not spray the outside of the appliance with water. Do not use a steam cleaner.
- Do not sit, lean or rest on the appliance door.
- Do not climb on to the appliance. Danger of tipping!
- Opening the water inlet and outlet while the appliance is in operation could pose a scalding hazard.
- Use original spare parts only.

Your appliance

Appliance description

- Capacity: 8 kg dry washing
- 6 main programmes
- 3 extra programmes
- 5 favourite programmes
- Additional programmes
 - Easy care
 - Pre-wash
 - Sport
 - Steam anti-crease
 - Night-time economy programme
 - Programmes for different fabrics
 - Programmes for lightly to very heavily soiled washing incl. anti-mite
 - Soaking
 - Soap wash
 - Bio wash
- Additional functions
 - Temperature selection
 - Spin speed selection
 - Delayed start
 - Stop after rinsing
 - Deselect parts of programmes
- Sensors for optimizing the wash cycle
- Plain text display
- Automatic door opener
- Language selection
- Childproof lock
- Aqua-Stop with anti-leak protection
- Automatic energy-saving stand-by

Construction






The appliance door can be set to open to the left or to the right. Our Customer Services can make the necessary adjustments to the appliance.

- 1 Operating and display elements (pivoting operating panel)



The operating panel can be set in one of three positions.

- 2 Detergent dispenser drawer
- 3 Appliance door
- 4 Drain tray
- 5 Foreign body trap
- 6 Emergency door release tool
- 7 Emergency door release
- 8 Identification plate
- 9 Circulation nozzle

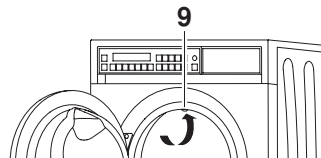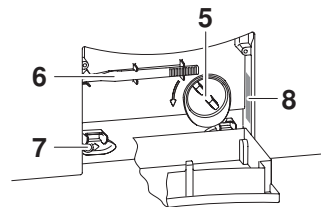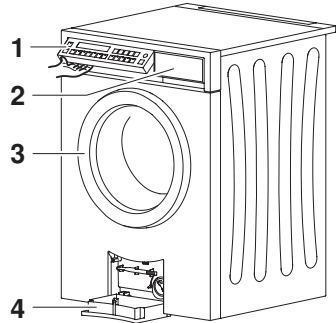


Detergent dispenser drawer

- 10 Pre-wash detergent, compartment I
- 11 Main wash detergent, compartment II
- 12 Liquid detergent flap
- 13 Siphon for fabric conditioner (softener)
- 14 Fabric conditioner (softener), compartment
- 15 Quick operating instructions

Front: German / French

Back: English / Italian

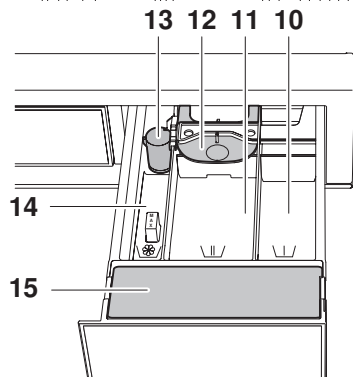

Operating and display elements



Main programmes



Whites 95 °C



Hand wash 20 °C



Coloureds 60 °C



WetClean 20 °C



Coloureds 40 °C



Favourites



Woolens 30 °C



Additional programmes

Additional programmes



Easy care



Night economy programme



Pre-wash



Fabric types



Sport



Degree of soiling /
Anti-mite



Steam anti-crease

Additional functions



Temperature setting



Quick wash cycle /
End of programme



Spin speed




Door opener



Delayed start

Plain text display

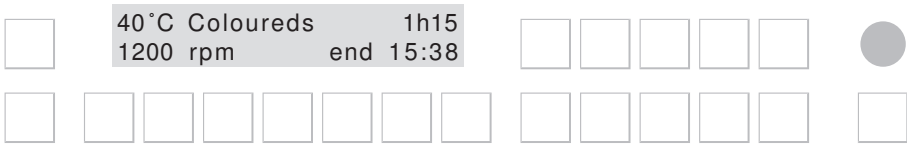

Various information appears in the plain text display during the programme selection and the programme sequence.

- Programme name with duration
- Programme end time
- Programme progress with time remaining
- Additional functions
- Delayed start
- User settings
- Hints and trouble-shooting

Communications interface

The service technician can conduct a trouble-shooting analysis over this optical interface.

Indicator lights

The buttons for the main programmes and certain additional programmes are equipped with an indicator light.



Indicator light flashes

Programme or function can be selected.



Indicator light is illuminated

Programme or function is active.



Indicator light is not illuminated

Programme or function is switched off.

Using for the first time

Before using the newly installed appliance for the first time, the following work should be carried out.



The appliance was tested with water before being shipped. There may therefore still be traces of water left in the appliance.


Transport lock




Before using the appliance for the first time, the transport lock must be removed (3 screws with washers at the back of the appliance).


Setting the language, time and date

► Set the language, time and date in the user settings.

► Hold the  button depressed until the following appears in the plain text display:

User settings
FN 267 XXXXXX

► Press the  button repeatedly until «Language» or «Time and date» «set?» appear in the plain text display.

► Use the  button to make the desired settings.




To ensure the user settings are saved, the power supply to the appliance should not be switched off for at least 30 minutes.

Running the first wash cycle without any washing


► Run an empty wash cycle to remove any residues from the manufacturing process.

► Add a little washing detergent to compartment II.













► Select the main programme .

Programme overview



To select the right wash programme, follow the fabric care symbols on the labels of the wash items, e.g. .

Main programmes

Programme	Symbol	Type of wash
Whites 95 °C		White cottons, linens: e.g. bed and table linen, towels, white or colour-fast underwear.
Coloureds 60 °C		Coloured cottons: e.g. bright blouses, overalls, shirts, bed linen.
Coloureds 40 °C		Coloured cottons (non-fast): normal sportswear, blue jeans, sweatshirts, T-shirts.
Woollens 30 °C		Gentle wash for woollens and other delicates. Only for woollens with a felt-free finish and labelled as «machine washable».
Hand wash 20 °C		Very gentle wash for items labelled with the  fabric care symbol.
WetClean 20 °C		For all fabrics labelled as washable. Most gentle treatment possible through applying a gentle rocking motion and a fine spray of water.
Favourites		5 programmes that can be freely put together and saved (♥1–♥5).
Steam anti-crease		Dry, creased washing that can be washed at min. 40 °C is partially uncreased and made damp, ready to iron.
Proofing		For starching or proofing fabrics. The starching or proofing agent can be added to the fabric conditioner compartment  .
Appliance hygiene		Without any washing. A small amount of water is heated up to around 80 °C and the steam produced sharply reduces the germ count.

The consumption figures given serve as a guide only and refer to the maximum wash load with selected degree of soiling. The figures can vary with, for instance, towelling material, a very cold water feed, different degree of soiling selected or a smaller wash load. The time remaining and the programme end time shown are adjusted during the programme sequence accordingly.

Load capacity	Spin speed *	Duration	Water	Energy
1-8 kg	1200 rpm	2h07	75 l	2.2 kWh
1-8 kg	1200 rpm	1h32	56 l	1.4 kWh
1-8 kg	1200 rpm	1h15	72 l	0.8 kWh
1-2.5 kg	800 rpm	0h49	52 l	0.3 kWh
1-2 kg	600 rpm	0h46	58 l	0.2 kWh
1-1.5 kg	600 rpm	0h58	60 l	0.2 kWh
-	-	-	-	-
1-1.5 kg	No spinning	0h23	1 l	0.1 kWh
1-3 kg	800 rpm	0h19	12 l	0.1 kWh
0 kg	No spinning	0h37	9 l	0.7 kWh

* Factory setting

Additional programmes

Easy care



For washing requiring very gentle treatment

- Reduced washing action
- Higher water level during rinsing
- Reduced spin speed: 800 rpm
- Optimum wash load: max. 3.5 kg

Pre-wash







Suitable for heavily soiled washing

- Programme duration extended: about 15 minutes

Sport



Short programme for a smaller, lightly soiled wash load

- Programme duration
 -  +  : 35 minutes
 -  +  : 45 minutes
- 2 instead of 3 rinsing cycles
- Optimum wash load: max. 2.5 kg




For lightly soiled washing, the washing detergent dosage should be reduced.

Steam anti-crease



The steam finish at the end of the programme significantly reduces creasing in the washing. Recommended for items that crease easily, e.g. shirts and blouses.

- The washing is warm and should be hung up immediately to dry – for easy ironing – or tumble dried.
- To avoid renewed creasing at the end of the programme, the washing is loosened up for an extended period (about 60 minutes). The washing can be unloaded at any time.
 - ▶ Press the  button and unload the washing.
- Programme duration extended: about 20 minutes
- Reduced spin speed: 1000 rpm
- Optimum wash load: max. 2 kg

Night economy programme



Large energy savings due to reduced wash temperature. The extended washing time ensures the washing performance is maintained.

- Programme duration extended: 25–50 minutes
- Energy saving depending on programme: 10–30 %



Water savings due to reduced amount of water for rinsing. The extended rinsing time ensures the rinsing performance is maintained.

- Water saving: 10–20 %

Fabric type




Depending on which main programme is selected, optimized programmes for different fabric types are available.



«**Shirts**» Can be selected with  and 

- Minimizes creasing
- Uses steam anti-crease
- Optimum wash load: max. 7 shirts / blouses



«**Leisurewear**» Can be selected with  and 



- Suitable for waterproof and breathable clothing
- Higher water level during washing and rinsing
- Intermediate spinning for optimal removal of water out of water-impermeable textiles
- Optimum wash load: max. 3 kg

«**Net curtains**» Can be selected with 

- Reduced washing action for very gentle treatment
- Higher water level during washing and spinning
- Very gentle intermediate spinning
- Washing remains lying in the water after the final rinse (stop after rinsing)
 - ▶ Press the  button 1×
 - Start draining with spinning at 400 rpm
 - ▶ Press the  button 2×
 - Start draining without spinning
- Optimum wash load: max. 2 kg

«**Black garments**»

Can be selected with  and 

- Higher water level and extended rinsing
- Optimum wash load: max. 4 kg if  is selected
max. 2 kg if  is selected

«**Denim**»

Can be selected with 

- Optimized for colour run from denim articles
- Optimum wash load: max. 4 kg

«**Baby garments**»

Can be selected with ,  and 

- Very thorough rinsing for the protection of sensitive baby skin
- At 95 °C: additional pre-wash
- Optimum wash load: max. 5 kg

«**Down filling**»

Can be selected with  and 

- Optimized for the particular wetting characteristics of down fabrics
- Intermediate spinning for optimal draining
- Optimum wash load: 1 item of washing, max. 2 kg

«**Silks**»

Can be selected with 

- Optimized for silk fabrics
- Reduced spinning to minimize creasing
- Optimum wash load: max. 1.5 kg

Degree of soiling / Anti-mite



Adjustment to the degree of soiling of the washing

«Soiling» «light»

- Suitable for lightly soiled washing

«Soiling» «medium»

- Wash time extended: about 15 minutes



«Soiling» «normal»

- Wash time extended: 25–40 minutes

 
«Soiling» «heavy»

- Extended wash time
- Higher water level during washing
- Additional rinsing cycle




«Anti-mite»

- Can be selected with  and  only.
- Suitable for individuals with an allergy to mites
 - The main wash is extended and intensified at the temperature set. The mites are killed and the allergens are rinsed out thoroughly.

«Soaking»


- An additional soaking cycle is carried out before the main wash.
 - ▶ Press the  button to set the soaking time (0.5–6 hours).

Separate rinsing / Separate spinning

- ▶▶▶| It is possible to skip parts of the programme selected.
 - ▶ Select main programme according to fabric care labels.
 - ▶ Press the  button 1×.
 - Rinsing and final spin are selected.
 - ▶ Press the  button 2×.
 - Last rinsing cycle and final spin are selected.
 - ▶ Press the  button 3×.
 - Separate final spin is selected.


Bio wash

The programme sequence is adapted for the use of multi-component detergents (alkaline detergent + bleach). First the alkaline detergent with softener (compartment **II**) is added to the wash and the suds are heated up to 40 °C. Then after around 6 minutes the bleach (compartment **I**) is added.






- ▶ Select main programme.
- ▶ Press the  button 2×.
 - «Bio wash» appears in the plain text display.

Soap wash

The programme sequence is adapted for the use of multi-component detergents (softener + soap detergent). The softener (compartment **I**) and the soap detergent (compartment **II**) are added to the wash one after the other.

- ▶ Select main programme.
- ▶ Press the  button 3×.
 - «Soap wash» appears in the plain text display.

Additional functions

Function / Symbol	Type of wash
Temperature setting 	<p>The temperature can be changed in steps of 10 °C or 15 °C, allowing lightly soiled (not stained) textiles to be washed with a saving in energy.</p> <p>Cold wash Temperature below 20 °C.</p>
Spinning 	<p>The spin speed can be changed in steps of 200 rpm (1200, 1000, 800, 600, 400 rpm, stop after rinsing, 1600, 1400 rpm). Delicates than thus be spun at a lower spin speed. However, this increases the drying time (greater energy consumption for tumble drying).</p>
Delayed start 	<p>Take advantage of cheap-rate electricity (delayed start period of 1–24 hours). When the time set is reached, the programme starts automatically.</p>
Quick wash / End of programme 	<p>Press the  button to skip individual parts of a programme at any time during the programme sequence.</p>

Favourites



Simplifies selecting frequently used programmes. You can compile your own favourites. Favourites are easy to start.

- A maximum of 5 favourites can be saved.



The appliance door has to be open to define, change or delete a favourite.

Defining your favourites

► Open the appliance door.

► Press the  button.

Define favourite

► Press the  button again.

Define favourite

♥1 empty

15:38

► Select the desired main programme, additional programmes and additional functions, e.g.:

40 °C Sport

0h29

♥1

► Press the  button.

♥1 save changes?

YES: ↓

NO: ↓

Save favourite «YES»:

- Press the  button.
 - The changes are saved.

40 °C Sport

0h29

♥1

Save favourite «NO»:


- Press the  button.
 - The changes are not saved.

Define favourite

♥1 empty



15:38

Starting your favourite

- ▶ Close the appliance door.
- ▶ Press the  button repeatedly until the desired favourite appears in the plain text display, e.g.:
 - The programme starts automatically after 20 seconds.

40 °C Sport	0h29
♥1	

Changing your favourite

- ▶ Open the appliance door.
- ▶ Press the  button repeatedly until the desired favourite appears in the plain text display, e.g.:
- ▶ To change your favourite:
Select a new main programme, additional programmes and additional functions, e.g.:
- ▶ Press the  button.

40 °C Sport	0h29
♥1	

60 °C Coloureds	1h15
♥1	

Save changes «YES»:

♥1 save changes?	
YES: ↓	NO: ↓

- ▶ Press the  button.
 - The changes are saved.


60 °C Coloureds	1h15
♥1	

Save changes «NO»:

- ▶ Press the  button.
 - The changes are not saved.

40 °C Sport	0h29
♥1	

Deleting a favourite

- ▶ Open the appliance door.
- ▶ Press the  button repeatedly until the favourite to be deleted appears in the plain text display, e.g.:
- ▶ Hold the  button depressed for about 3 seconds.

40 °C Sport 0h29
♥1

♥1 clear?
YES: ↓ NO: ↓

Delete favourite «YES»:

- ▶ Press the  button.
 - The favourite is deleted.

Define favourite
♥1 empty 15:38

Delete favourite «NO»:




- ▶ Press the  button.
 - The favourite remains saved.

40 °C Sport 0h29
♥1

User settings

You can change certain appliance settings to suit your own preferences. Settings can be changed irrespective of whether the appliance door is open or closed, provided no wash programme is running. The procedure is generally the same for all settings.

Changing user settings

- ▶ Hold the  button depressed for 5 seconds.
- ▶ Press the  button repeatedly until the desired setting appears in the plain text display, e.g.:
- ▶ To change, press the  button.
 - The setting is taken over automatically and must not be confirmed.

User settings
FN 267 XXXXXX

Childproof lock
ON

Childproof lock
OFF


Exiting user settings

- ▶ Press the  button repeatedly until the plain text display goes out.



If no button is pressed within the next 15 seconds, user settings is exited and the plain text display goes out.

The following diagram gives an overview of the possible user settings.

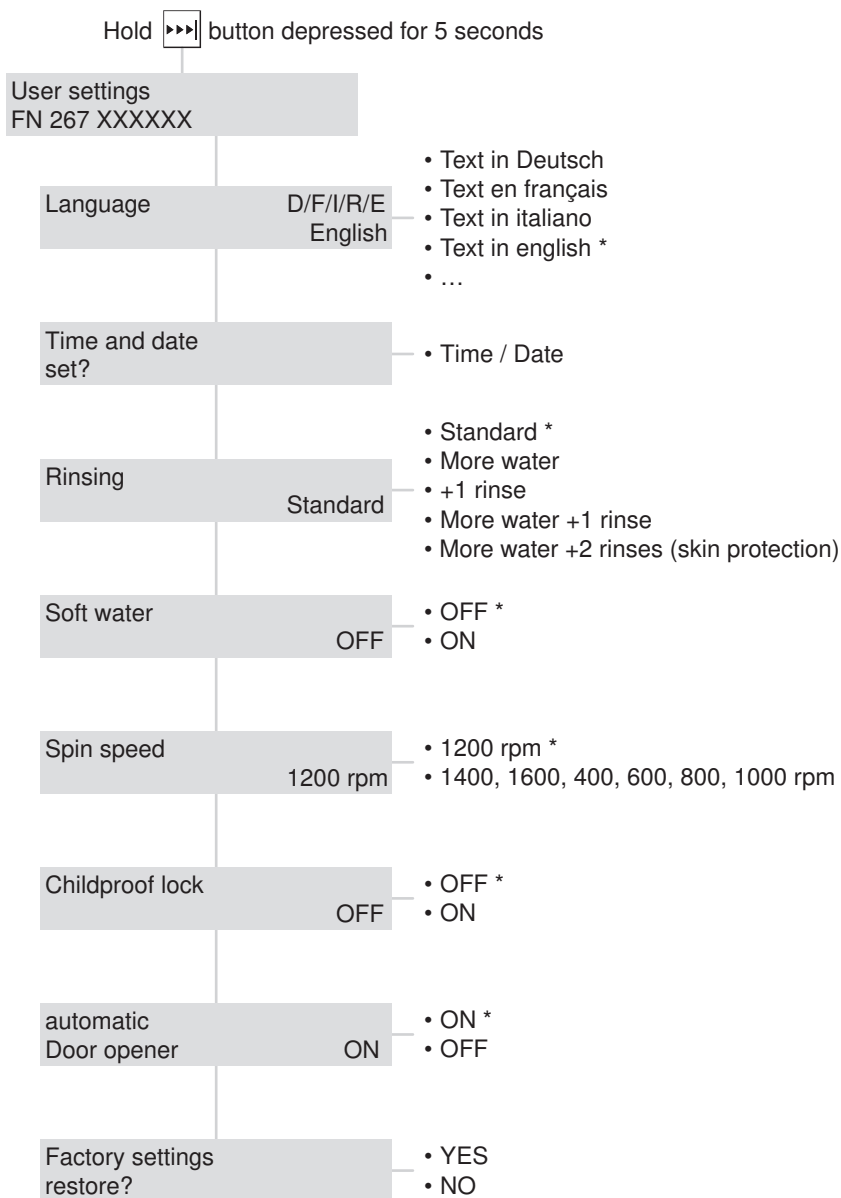





* Factory settings

Language

The language in the plain text display can be changed.

Changing the language

- ▶ Hold the  button depressed for 5 seconds.
- ▶ Press the  button repeatedly until the current language setting appears in the plain text display, e.g.:
- ▶ Press the  button repeatedly until the desired setting appears in the plain text display, e.g.:
 - The setting is taken over automatically and must not be confirmed.
- ▶ Press the  button repeatedly until the plain text display goes out.

User settings
FN 267 XXXXXX

Language	D/F/I/R/E
	English

Sprache	D/F/I/R/E
	Deutsch






Time / Date

The time and date must be reset if the appliance has been disconnected from the mains for a longer period of time (about 5 weeks).



To ensure the time and date are stored, the appliance should not be disconnected from the mains supply for at least 30 minutes after making the settings.

Changing the time / date

- ▶ Hold the  button depressed for 5 seconds.
- ▶ Press the  button repeatedly until the following appears in the plain text display:
- ▶ Press the  button.
 - The hour value flashes and can be changed.
 - ▶ Press the  button to change the value.
- ▶ Press the  button.
 - The next value flashes and can be changed.

User settings FN 267 XXXXXX

Time and date set?

Time	15:38
Date	17.01.2007

Rinsing

There are 5 different settings for rinsing intensity.

«Standard»

- Normal water level

«More water»

- The water level is increased by 1–3 cm during each rinse cycle.

«+1 rinse»

- An extra rinse cycle is added to each programme.





«More water +1 rinse»


- An extra rinse cycle is added to each programme and the water level is also increased by 1–3 cm during each rinse cycle.

«Skin protection»


- Two extra rinse cycles are added to each programme and the water level is also increased by 5 cm during each rinse cycle. This function is particularly suitable for people with sensitive skin or with a suspected allergy to washing detergent.

Changing the rinsing intensity

- ▶ Hold the  button depressed for 5 seconds.
- ▶ Press the  button repeatedly until the current setting appears in the plain text display, e.g.:
- ▶ Press the  button repeatedly until the desired setting appears in the plain text display, e.g.:
 - The setting is taken over automatically and must not be confirmed.
- ▶ Press the  button repeatedly until the plain text display goes out.

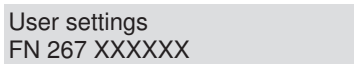

User settings
FN 267 XXXXXX

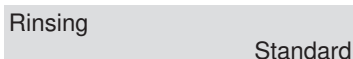

Rinsing
Standard







Rinsing
more water

Soft water

The programmes can be adjusted for use with very soft water (e.g. in Ticino). The slightly reduced wash action prevents excessive foaming. Since the detergent does not rinse out as well with soft water, the amount of water used for rinsing is increased slightly and an extra rinse cycle is added.

Switching soft water on / off

- ▶ Hold the  button depressed for 5 seconds.
- ▶ Press the  button repeatedly until the current setting appears in the plain text display, e.g.:
- ▶ Press the  button.
 - The setting is taken over automatically and must not be confirmed.
- ▶ Press the  button repeatedly until the plain text display goes out.

User settings
FN 267 XXXXXX

Soft water OFF

Soft water ON





Spin speed

Each programme and combination of programmes is assigned an optimum spin speed at the factory. This can be adjusted to suit individual needs.

Increasing the spin speed: To protect delicates, can only be used with suitable programmes (e.g. whites).

Reducing the spin speed: Can be used with all programmes.

Setting maximum spin speed

- ▶ Hold the  button depressed for 5 seconds.
- ▶ Press the  button repeatedly until the current spin speed appears in the plain text display, e.g.:
- ▶ Press the  button repeatedly until the desired setting appears in the plain text display, e.g.:
 - The setting is taken over automatically and must not be confirmed.
- ▶ Press the  button repeatedly until the plain text display goes out.

User settings
FN 267 XXXXXX





Spinning at
1200 rpm

Spinning at
800 rpm

Childproof lock

The childproof lock is to prevent children accidentally starting or stopping a programme. If the childproof lock is on, a programme can only be started by pressing two buttons simultaneously.

Switching the childproof lock on / off


- ▶ Hold the  button depressed for 5 seconds.
- ▶ Press the  button repeatedly until the current setting appears in the plain text display, e.g.:
- ▶ Press the  button.
 - The setting is taken over automatically and must not be confirmed.
- ▶ Press the  button repeatedly until the plain text display goes out.

User settings
FN 267 XXXXXX





Childproof lock
OFF

Childproof lock
ON

Automatic door opener

If the automatic door opener is on, the appliance door opens automatically at the end of the programme. Otherwise it remains closed and can be opened by pressing the  button.

Switching the automatic door opener on / off

- ▶ Hold the  button depressed for 5 seconds.
- ▶ Press the  button repeatedly until the current setting appears in the plain text display, e.g.:
- ▶ Press the  button.
 - The setting is taken over automatically and must not be confirmed.
- ▶ Press the  button repeatedly until the plain text display goes out.

User settings
FN 267 XXXXXX

automatic	
Door opener	OFF




automatic	
Door opener	ON

Restoring factory settings

The factory settings can be restored.



Any favourites that have been saved will be deleted.

- ▶ Hold the  button depressed for 5 seconds.
- ▶ Press the  button repeatedly until the following appears in the plain text display:
- ▶ Press the  button.

Restore factory settings «YES»:

- ▶ Press the  button.

Restore factory settings «NO»:

- ▶ Press the  button.

User settings
FN 267 XXXXXX

Factory settings
restore?


Factory settings
YES: ↓ NO: ↓

Factory settings
restored!


Washing

Preparing the appliance

- ▶ Ensure that the foreign body trap **1** is sitting properly.

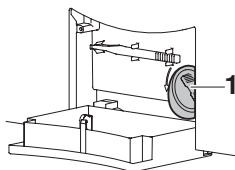


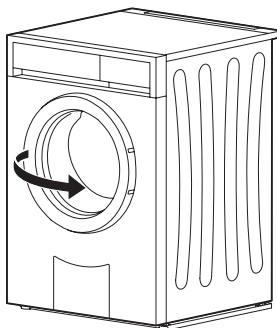
- ▶ Plug the appliance in at the mains or turn the wall switch on.
 - The appliance switches on.

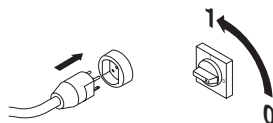

- ▶ Turn the water tap on.




- ▶ Press the  button to open the appliance door.



Loading the appliance


- ▶ Load dry washing (max. 8 kg).
 - If washing normally soiled whites and coloureds, fill the washing drum.
 - If washing heavily soiled whites and coloureds, fill the washing drum max. $\frac{3}{4}$ full.
 - If washing easy care cotton fabrics, white and coloured synthetic fabrics as well as mixed fabrics, fill the washing drum max. $\frac{1}{2}$ full.
 - If washing delicates, woollens, silks, poly-acrylics or net curtains, fill the washing drum max. $\frac{1}{4}$ full.

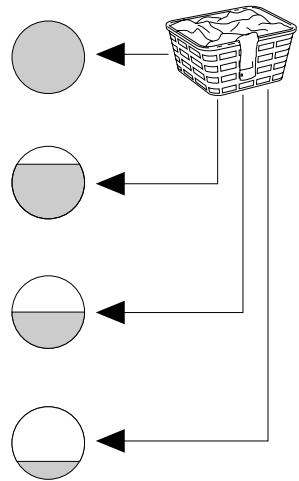

For wet loads, halve these load capacities.

To prevent unbalanced spinning, vibration noise and interrupted spinning action, avoid loading the washing drum with any one single, heavy item.

 
- ▶ Close the appliance door (push to).
 - The following appears in the plain text display:
 - The programme selection indicator lights flash.



If no programme selection is made within 20 seconds, all the displays go out. A programme selection can still be made, however.

Adding washing detergent

- ▶ Pull the detergent dispenser drawer out as far as it will go.

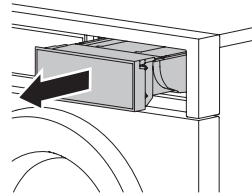

Powder detergent

If using powder detergent, flap **1** in compartment **II** must be open.


- ▶ Lift flap **1** and push back.



Liquid detergent

If using liquid detergent, flap **1** in compartment **II** must be closed.

- ▶ Pull flap **1** to the front and fold down.

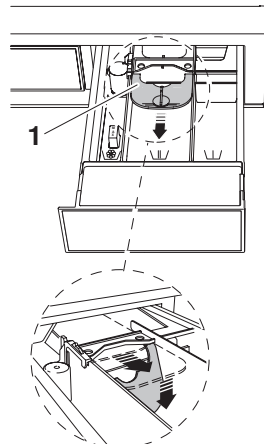Do not fill with liquid detergent past the upper mark. Liquid detergent can only be used for the main wash with programmes without a pre-wash. They are only suitable for wash temperatures of 30–60 °C. With programmes with a wash temperature of 95 °C, liquid detergents are not as effective as they do not contain bleach.



Liquid detergents are best used with the main programmes  /  /  and with programmes with  and .

Liquid detergent and a delayed start

If a delayed start has been selected, after loading the washing the liquid detergent should be added to a dosing aid (e.g. ball). It is important that the liquid detergent does not spill onto the washing during the delayed start period, otherwise the washing could be damaged through a possible chemical reaction.

Detergent dosage



Adding too much detergent could cause excess foaming, giving a poor wash result and, in the worst case, causing damage to the appliance.


The amount of detergent required depends on the degree of soiling as well as the wash load, the hardness of the water and the product being used. Follow the detergent manufacturer's dosing instructions.

The hardness of the water is measured using the French degree of water hardness (°fH) and is subdivided into three categories:


- soft 0 °fH to 15 °fH
- medium 15 °fH to 25 °fH
- hard over 25 °fH (NB Use water softener to reduce amount of washing detergent required.)

The local water authorities can provide information on the level of water hardness in your area.


Compartment


Pre-wash detergent	Add to compartment I
Main detergent	Add to compartment II
Fabric conditioner (softener)	Add to compartment 

Bio wash

Alkaline detergent	Add to compartment II
Bleach	Add to compartment I
Fabric conditioner (softener)	Add to compartment 

Soap wash

Water softener	Add to compartment I
Soap detergent	Add to compartment II
Fabric conditioner (softener)	Add to compartment 

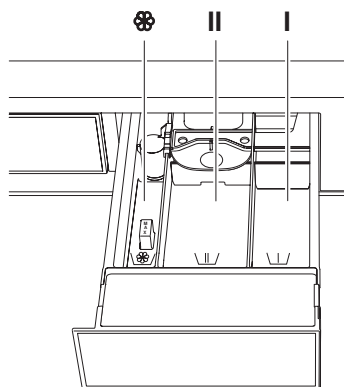

Fabric conditioner

Do not fill with fabric conditioner past the «MAX» mark.

Do not use fabric conditioner if drying the washing in a tumble dryer. Tumble drying automatically leaves the washing soft and fluffy to the touch.

Soap detergent

Select the additional «Soap wash» programme to wash with soap detergent. Since soap binds with lime, soap detergent should only be used when the water is soft or moderately hard (up to 25 °fH) and limescale protection is added. Soap scum can otherwise form and build up in the laundry and the appliance. Further, limescale build-up on the tub heating element can make repairs necessary.

Dyeing textiles


Textiles can be dyed in the appliance using suitable dyeing agents. Please follow the manufacturer's safety instructions and warnings carefully.



Each wash programme starts with brief draining and for this reason liquid dye components should be added after this.

After adding the wash detergent

- ▶ Push the detergent dispenser drawer back in.
- ▶ Select programme.

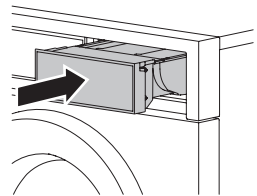

Programme selection

«Press and go»

A main programme can be started at the press of a single button. All the necessary settings for the programme are provided automatically.

Select or deselect any additional programmes or functions by pressing the relevant buttons.

If no other button is pressed within the next 20 seconds, the programme selected starts automatically.





Use 'Programme overview' to determine which programme is the most suitable for your washing.

Selecting main programme

- ▶ Close the appliance door.
 - The indicator lights for the programme selection buttons flash.



- ▶ Press the programme selection button required (press  and  1× or several times).
 - The indicator light for the programme selected illuminates.
 - The programme selected, the likely duration (hours/minutes) and the end time appear in the plain text display.
 - The indicator lights for additional programmes that may be selected flash.




During this time it is possible to select a different programme. All additional programmes selected are cancelled and must be reselected.

- If no other button is pressed within the next 20 seconds, the programme selected starts automatically.

Selecting degree of soiling / anti-mite / soaking




- ▶ Immediately after selecting the programme, press the  button repeatedly until the desired degree of soiling appears:
 - «Soiling» «light»
 - «Soiling» «medium»
 - «Soiling» «normal»
 - «Soiling» «heavy»
 - «Anti-mite»
 - «Soaking»
- The likely duration of the programme appears in the plain text display.



Anti-mite can only be selected with the  and  programmes.


Setting the soaking time

- ▶ Select «Soaking» as the degree of soiling.
- ▶ Press the  button repeatedly until the desired soaking time appears in the plain text display.

The soaking time can be set at intervals of 30 minutes, starting initially at 2 hours and going down to 30 minutes and then at 6 hours and going down to 30 minutes.




The soaking and delayed start functions cannot be used at the same time.

If the water used for soaking is not to be used for the main wash, pre-wash has also to be selected using the  button.

Changing the temperature




- ▶ Immediately after selecting a programme, press the  button repeatedly until the desired temperature appears in the plain text display.



It is still possible to change the temperature once the programme has started running.

Changing the spin speed



- ▶ Immediately after selecting a programme, press the  button repeatedly until the desired spin speed appears in the plain text display.




It is possible to change the current setting while a programme is running.

The recommended and maximum settable spin speed depends on the programme selected.

With «No spinning / Stop after rinsing», the washing remains lying in the water after the final rinse. There is no spinning nor intermediate spinning.


Selecting delayed start





- ▶ Immediately after selecting a programme, hold the  button depressed until the desired programme end time (max. 24 hours) appears in the plain text display.
 - The plain text display goes dark.
 - When the time set is reached, the programme selected starts automatically.



Washing can be added at any time.




The time remaining to the delayed start can be reduced (in 30 minute intervals) to null by repeatedly pressing the  button.

Selecting bio wash / soap wash

- ▶ Select programme.
- ▶ Press the  button 2x.
- ▶ Press the  button 3x.


Bio wash	1h12
Wash detergent + Bleach	
Soap wash	1h12
Softener + Soap	


Selecting separate rinsing / separate spinning

- ▶ Select programme.
- ▶ Press the  button 1x.
- ▶ Press the  button 2x.
- ▶ Press the  button 3x.

Rinsing	0h36
	15:38
Final rinse	0h14
	15:16
Final spin	0h08
	15:10

Opening the appliance door during operation

The appliance door can only be opened if the water level and temperature are still low and there is no spinning in progress. As long as the indicator light for the  button is illuminated, the appliance door can be opened.

- ▶ Press the  button.
 - The appliance door opens.
 - The plain text display flashes.
- ▶ Add or unload wash items.
- ▶ Close the appliance door.
 - The programme is resumed.



In the event of a power failure, the appliance door can only be opened using the emergency door release.

The programme memory ensures that the programme sequence is resumed after a power failure.

Changing selection


During programme selection

- ▶ Press another programme button.
 - All settings are cancelled.

After a programme has started

The spin speed and temperature can still be changed. To change any other settings, the programme must be aborted.

Aborting a programme


- ▶ Press the  button repeatedly until the following appears in the plain text display:
 - This part of the programme cannot be skipped and will be carried out in full.

Draining

0h01
end 15:38

Programme selection with childproof lock activated

How to turn the childproof lock on/off is described in 'User settings'.

- ▶ Close the appliance door.
 - In the plain text display appears:
 - The indicator lights for the programme buttons flash.
- ▶ Hold the desired programme button depressed and at the same time press the  button.


Childproof lock

12:32



The appliance can now be operated without regard to the childproof lock until the programme starts.

Aborting a programme


- ▶ Hold the active programme button depressed – the indicator light illuminates – and at the same time press the  button.

End of programme

Loosening up the washing

Shortly before the end of the programme, the washing is loosened up. This takes about 1–2 minutes. If steam anti-crease has been selected, the loosening-up period is extended to about 60 minutes to prevent further creasing.




Press the  button to unload the washing at any time during the loosening-up phase.

With «Automatic door opener OFF»

When the programme has finished, the following appears in the plain text display for 20 minutes:

► End of programme

- Press the  button.
 - The appliance door opens and the washing can be unloaded.





In the event of a power failure, the appliance door can only be opened using the emergency door release.

With «Automatic door opener ON»

- The appliance door opens automatically at the end of the programme.
- The washing can be unloaded.


With «Stop after rinsing»

The washing remains lying in the water after the final rinse. The water must be drained off before the washing can be unloaded.

- Press the  button 1×.
 - The washing is spun at the speed set for the programme selected.
- Press the  button 2×.
 - Draining without spinning.

End of the wash day

- ▶ Clean the detergent dispenser drawer if necessary.
- ▶ After finishing washing for the day, remove any deposits or foreign bodies from out of the door seal.
- ▶ Push the appliance door to, but do not close.
 - This allows the washing drum and the door seal to dry.

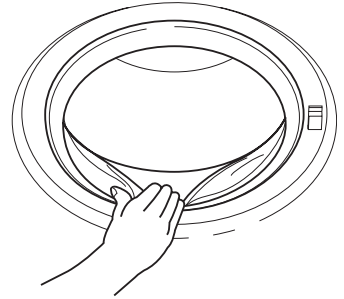

Care and maintenance


Using the correct dosage of washing detergent will automatically clean the inside of the appliance. Immediately wipe away all traces of washing detergent from the chrome steel with a soft cloth to avoid staining.

Cleaning the detergent dispenser drawer


If the normal dosage of washing detergent is used, the compartments in the detergent dispenser drawer are cleaned by the water flowing in. Wash out the detergent compartments if particularly soiled.


Cleaning the detergent compartments

- ▶ Pull the detergent dispenser drawer **1** out as far as it will go, then lift slightly and remove.
- ▶ Wash out the detergent compartments.

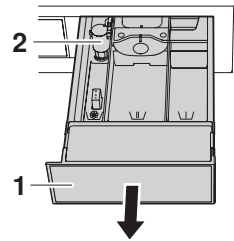

Cleaning the siphon and suction tube

- ▶ Pull the siphon **2** in the fabric conditioner compartment  in the direction of the arrow.
- ▶ Clean the siphon **2** and suction tube **3**.
- ▶ Replace the siphon correctly.

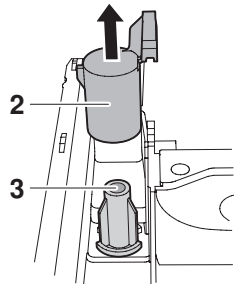


Cleaning the water inlet filter

To avoid blockages, the mesh filter **4** in the water inlet must be periodically checked and, if necessary, cleaned.



The water inlet should be tested for leaks following maintenance work.

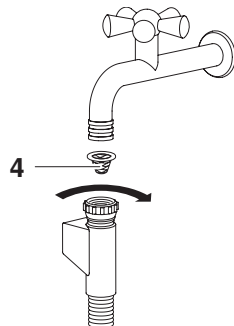





Emergency draining



The water in the appliance may be hot. Scalding hazard!
Allow to cool before emergency draining.

In the event of a blocked water outlet or drain pump, a malfunction or a power failure, if there is water still in the appliance it must be drained off as follows:

- ▶ Open the drain tray **1** – at bottom front of appliance – by pressing it at the top.
- ▶ Open the drain tray **1** right down.
 - The drain tray also functions as a receptacle for collecting the water being drained off.
- ▶ Release the foreign body trap **2** slightly by slowly turning it anti-clockwise. Steadily drain off the water.

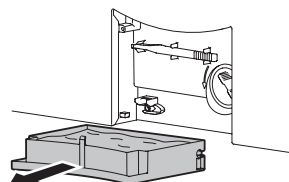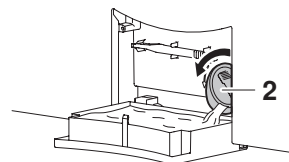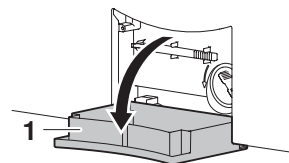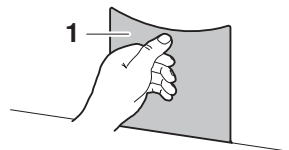

From time to time the drain tray may have to be emptied.

- ▶ Close the foreign body trap by turning it clockwise and remove the drain tray from the front.
- ▶ Empty the drain tray and then put it back in position (push it straight in until it clicks into position).



When draining off the water, the drain tray can be removed and a larger receptacle used in its place. The appliance can hold up to 30 litres of water.



Cleaning the foreign body trap

The foreign body trap **1** must be periodically cleaned of any deposits.




The foreign body trap should also be cleaned after washing, e.g. pet blankets or other wash items that cause a thick build-up of fluff.

- ▶ Drain off any residual water, see 'Emergency draining'.
- ▶ Then turn the foreign body trap **1** anti-clockwise and remove. Clean thoroughly.
- ▶ Remove any foreign objects (e. g. buttons, coins, etc).
- ▶ With the emergency door release tool, check that the suds pump's impeller **2** can turn.
- ▶ If the impeller **2** does not turn, please contact Customer Services.

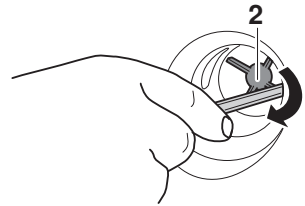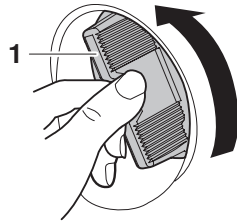

The impeller **2** may turn stiffly. This is construction related and does not indicate the presence of any foreign object or defect.

- ▶ Replace the foreign body trap **1** – with the cam **3** pointing upwards – turning until tight.
- ▶ Replace the drain tray and close it to.

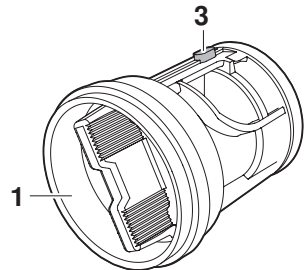

Trouble-shooting

This section lists faults that can be solved simply by following the instructions given. If another fault is displayed or the fault cannot be remedied, please call Customer Services.




Please note down the error message in full (message, serial number and error number) before calling Customer Services.


F.. see instructions
FN 267 XXXXXX EXXX

What to do if ...

... **A2 Check water outlet** **E34** appears

Possible cause	Solution
<ul style="list-style-type: none"> ■ The foreign body trap or suds pump is blocked. ■ The drain hose is bent or kinked. ■ The outlet or drain trap is clogged. ■ The circulation nozzle is clogged. 	<ul style="list-style-type: none"> ▶ Remove the cause of the problem. ▶ Cancel the error message by pressing the  button. ▶ Restart the programme.


... **A2 Foreign body trap clean** **E53** appears

Possible cause	Solution
<ul style="list-style-type: none"> ■ The foreign body trap is clogged. ■ The circulation nozzle is clogged. 	<ul style="list-style-type: none"> ▶ Remove the cause of the problem. ▶ Cancel the error message by pressing the  button. ▶ Restart the programme.

... **A5 Spin stop:
Unbalanced load** **EXX** **appears**

Possible cause	Solution
■ Large items are unevenly distributed in the washing drum.	▶ Wash large and small items together to reduce the possibility of unbalanced loads forming.
■ Pillows or similar items in the wash.	▶ Remove the pillows. ▶ Spin the washing again. ▶ Spin the pillows separately.
■ Wash items are tangled	▶ Separate the wash items. ▶ Fasten duvet covers and pillow cases. ▶ Spin the washing again.


... **A9 Check water inlet** **EXX** **appears**

Possible cause	Solution
▶ The water tap is turned off.	▶ Remove the cause of the problem or wait until the water supply is restored.
▶ The mesh filter in the water connection is clogged.	▶ Cancel the error message by pressing the  button.
▶ An interruption in the water supply.	▶ Restart the programme.
▶ The water pressure is too low.	


... **A9 Foreign body trap
check** **E42** **appears**

Possible cause	Solution
■ The foreign body trap is missing or is not sitting correctly.	▶ Ensure the foreign body trap is sitting correctly.

... F6 see instructions
FN 267 XXXXXX EXXX appears

Possible cause	Solution
<ul style="list-style-type: none">■ Related to anti-leak protection.	<ul style="list-style-type: none">▶ Turn off the water tap.▶ Note down the error message in full (message, serial number and error number).▶ Cancel the error message by pressing the  button.▶ Do not interrupt the power supply to the appliance for the next 10 minutes so that the drain pump can continue to run.▶ Call Customer Services.

... F.. see instructions
FN 267 XXXXXX EXXX appears

Possible cause	Solution
<ul style="list-style-type: none">■ Various situations can lead to an «F» error message.	<ul style="list-style-type: none">▶ Cancel the error message by pressing the  button.▶ Switch off the power supply for about 1 minute.▶ Switch the power supply back on again and select a new programme.▶ If the error message reappears, note down the error message in full (message, serial number and error number), turn off the water supply and switch off the power supply.▶ Call Customer Services. <p>If there is still some washing in the appliance:</p> <ul style="list-style-type: none">▶ Carry out emergency draining.▶ Use the emergency door release.▶ Unload the washing.▶ Call Customer Services.

... Formation of foam: Programme extended **appears**

Possible cause	Solution
<ul style="list-style-type: none">■ If there is very heavy foaming during the wash cycle, the programme is automatically extended by an additional rinsing cycle. This improves the wash results, but also increases the duration of the programme.	<ul style="list-style-type: none">▶ Reduce the amount of washing detergent used next time.▶ Adjust the amount of washing detergent used to the water hardness.

... the programme takes significantly longer than indicated

Possible cause	Solution
<ul style="list-style-type: none">■ Too much washing detergent (lengthening the rinsing time).	<ul style="list-style-type: none">▶ Reduce the amount of washing detergent used next time.
<ul style="list-style-type: none">■ Uneven load in the washing drum.	<ul style="list-style-type: none">▶ Wash large and small items together to reduce the possibility of unbalanced loads forming.
<ul style="list-style-type: none">■ Very cold water intake (lengthening the heating time)	


... the washing is not spinning or is not being spun properly

Possible cause	Solution
■ The spin speed set is too low.	▶ Increase the spin speed for the next wash cycle.
■ Too uneven a load in the washing drum. The wash items cannot be more evenly distributed.	▶ Wash large and small items together to reduce the possibility of very unbalanced loads forming.
■ Steam anti-crease was selected and the appliance was not standing level.	▶ Optimize the appliance set-up according to the installation instructions.

... vibrating heavily when spinning

Possible cause	Solution
■ The transport lock has not been removed.	▶ Remove the transport lock.
■ The feet of the appliance are not properly adjusted.	▶ Optimize the appliance set-up according to the installation instructions.
■ The load could not be optimally balanced in the washing drum. (This is not a malfunction.)	▶ Wash large and small items together to reduce the possibility of unbalanced loads forming.

... at the end of the programme, the appliance door does not open when the  button is pressed

Possible cause	Solution
■ The appliance door is stuck.	▶ Press hard against the lock side of the appliance door (i.e. front edge of appliance door). – Some text appears in the plain text display. ▶ Press the  button.
■ An interruption in the power supply.	▶ Use the emergency door release.

... traces of washing detergent left behind in the washing detergent compartment

Possible cause	Solution
■ Damp or lumpy washing detergent.	▶ Store washing detergent in a dry place.
■ The washing detergent compartment was damp and a delayed start was selected.	▶ Wipe the washing detergent compartment dry before adding the detergent.
■ The water flow pressure is too low.	▶ Open the water tap fully.
■ The water inlet is scaled up.	▶ Check the water supply and, if necessary, clean the mesh filter. ▶ Clean the nozzles above the detergent dispenser drawer.
■ The flap for liquid detergent is down.	▶ Put the flap in the upper position.

... traces of fabric conditioner or water left behind in the fabric conditioner compartment

Possible cause	Solution
■ The siphon in the fabric conditioner compartment is missing or is not in place correctly.	▶ Ensure the siphon is in place correctly.
■ The siphon or suction tube is clogged.	▶ Clean the siphon and suction tube.

... the flow of the water circulation is too weak

Possible cause	Solution
■ The circulation nozzle is clogged.	▶ Clean the nozzle.
■ The foreign body trap is clogged	▶ Clean the foreign body trap.

... problem with water hammer in the water pipe

Possible cause	Solution
■ The plumbing system is sensitive to water hammer.	▶ Slight water hammer is normal and does not affect the functioning of the appliance.
■ Plumbing pressure is set too high.	▶ Fit a pressure reduction valve on the inlet hose.

Opening the appliance door in the event of a power failure




Ensure that the washing drum is stationary. Do not touch the drum while it is still in motion – risk of serious injury!



If the emergency door release tool **2** is missing, a screw driver can be used instead.

- ▶ Turn off the water tap.
- ▶ Switch off at the wall switch or pull the plug out of the mains socket.
- ▶ Open the drain tray **1** – bottom front of the appliance – by pressing the upper part and fold right down.
- ▶ If necessary, carry out emergency draining.
- ▶ Remove the drain tray **1**.
- ▶ Remove the emergency door release tool **2** from its fastening.
- ▶ Insert the emergency door release tool **2** into opening **3** and turn in the direction of the arrow (see arrow on appliance).
 - The appliance door springs open.

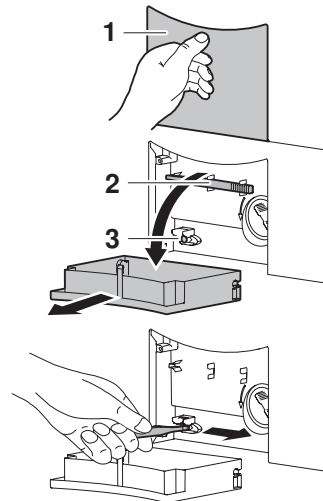





The illustrations show the details of an appliance that opens to the right. In the case of an appliance that opens to the left, the opening is to the right and the release tool has to be turned anti-clockwise.

Washing tips

Fabric care symbols



To wash items correctly, please follow the fabric care symbols on the labels of the wash items.

General tips

- Wash white and coloured textiles separately.
- Empty pockets and turn inside out. Remove any foreign objects (coins, nails, paper clips, etc.).
- Empty and brush out pockets of work overalls worn in the metal industry (metal shavings can damage the washing and cause rust stains).
- Fasten duvet covers and pillow cases; close zips and hook and eye fasteners; fasten cloth belts and apron ties.
- Wash smaller items (e.g. nylon tights, belts) and items with zips and hooks in a washing net or cushion cover.
- Remove stains before washing using a suitable stain remover.
- Pre-treat heavily soiled areas (collars, cuffs, etc.) with soap, special detergent or paste.
- For heavily soiled washing, select the additional pre-wash  programme or change the degree of soiling to «heavy».
- Wash woollens and other textiles with the  fabric care label using the main hand wash  programme or WetClean  and detergent suitable for woollens and delicates.

Net curtains

If washing curtains made from mixed or man-made fibres:

- Ask the retailer whether the curtains are machine washable and, if so, at what water temperature.
- Fill the washing drum only a quarter full.
- Tie up metal rollers and plastic sliders using an open weave fabric.
- Use a mild detergent (use sparingly due to foaming).
- With older, faded curtains, the material is weaker and may be easily damaged if machine washed.
- A special programme is available for gently washing net curtains.
 - ▶ Select main programme .
 - ▶ Press the  button repeatedly until «Net curtains» appears in the plain text display.

Energy and water economy

- Use the maximum wash load capacity of the particular programme.
- For greater washing economy, select the «Night economy programme».
- Select «Pre-wash» or «Soak» only for washing that is heavily soiled or stained.
- Select the «Sport» function for slightly soiled but not stained washing.
- Follow the instructions on the packaging of the washing detergent for how much washing detergent to add.

Unsatisfactory wash results

White residue on washing

Possible cause	Solution
<ul style="list-style-type: none">■ Despite thorough rinsing, badly soluble compounds (zeolites) in the detergent can be left on the washing.	<ul style="list-style-type: none">▶ Shake out or brush the wash items.▶ Rewash the items again with just a little detergent.▶ Use a liquid detergent that does not contain zeolites.▶ Select the additional «Black garments» programme.

Grey residue on washing

Possible cause	Solution
<ul style="list-style-type: none">■ Grease and dirt particles have not been removed from fabric effectively.■ Residue from detergent, limescale and dirt.	<ul style="list-style-type: none">▶ Use more detergent next time.▶ Use heavy-duty washing detergent.▶ Adjust the amount of detergent to the water hardness and the degree of soiling of the washing.
<ul style="list-style-type: none">■ Overloaded washing drum.	<ul style="list-style-type: none">▶ Put fewer items in the washing drum.

Unsatisfactory wash result using detergent for coloureds

Possible cause	Solution
■ Exceptionally heavily soiled washing.	▶ Select stronger wash programme, e.g. degree of soiling «normal» or «heavy».
■ Washing detergent used (detergents for coloureds) does not contain bleach. Fruit, coffee or tea stains cannot be removed.	▶ Use washing detergent containing bleach.

Unsatisfactory wash result using liquid detergent

Possible cause	Solution
■ Liquid detergent used does not contain bleach. Fruit, coffee and tea stains cannot be removed.	▶ Use washing detergent containing bleach.

Soap deposits on washing

Possible cause	Solution
■ Water too hard.	▶ Only use soap detergent if the water hardness does not exceed 25 °fH.

Colours running in the wash

Possible cause	Solution
■ Non-fast colours in the wash.	▶ Wash white and coloured textiles separately. ▶ Follow the fabric care instructions on the items of washing.
■ Objects in the wash whose colour has run.	▶ Empty garment pockets.

Unsatisfactory rinsing performance

Possible cause	Solution
■ Too much washing detergent.	▶ Adjust the washing detergent dosage to the water hardness and degree of soiling.
■ Very «soft» water (below 15 °fH).	▶ Set to the soft water setting (see 'User settings').


Fabric stains

Possible cause	Solution
■ Rust stains. ■ Chemical effect.	▶ Brush out work overall pockets. ▶ Residues from hair care products, cosmetics and plants can react with the suds to cause a chemical reaction that can result in staining. ▶ Wash items with metal parts separately.

Holes, rips or tears

Possible cause	Solution
<ul style="list-style-type: none">■ Washing items with zips or hooks (e.g. bras) open.	<ul style="list-style-type: none">▶ Fasten zip fasteners and hooks before washing.▶ Wash delicates in a laundry bag or pillow case.▶ Turn garment pockets inside out.
<ul style="list-style-type: none">■ Chemical effect of washing detergent.■ Fabric quality, wear and tear, weathering of fibres.	<ul style="list-style-type: none">▶ Do not put washing detergent directly on to fabrics.
<ul style="list-style-type: none">■ Washing drum damaged by foreign objects (e.g. nails, paper clips, bra hooks).	<ul style="list-style-type: none">▶ Inspect the washing drum for foreign objects and for damage.▶ Remove foreign objects.▶ Call Customer Services if the washing drum is damaged.


Fabric wear

Possible cause	Solution
<ul style="list-style-type: none">■ Washing drum overloaded.	<ul style="list-style-type: none">▶ Put less laundry into the washing drum.
<ul style="list-style-type: none">■ Friction between fabrics during washing.	<ul style="list-style-type: none">▶ Select the «Easy care»  programme.
<ul style="list-style-type: none">■ Pilling.	<ul style="list-style-type: none">▶ Turn items inside out before washing.


Spare parts

Please give model number and exact description when ordering parts.

 Water outlet hose 1.5 m / 4,0 m



 Siphon for fabric conditioner (softener)



Detergent dispenser drawer



Liquid detergent flap



 
Emergency door release tool




Foreign body trap




Drain tray



Pressure reduction valve

 

Quick operating instructions

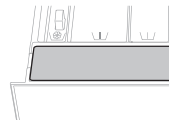

Technical data

Dimensions


Height:	85 cm
Width:	59.5 cm
Depth:	60 cm
Empty weight:	71 kg
Dry load capacity:	8 kg dry washing

Plumbing

Connection to water supply:	Cold water G $\frac{3}{4}$ "
Permitted flow pressure:	0.1–1.0 MPa (1–10 bar)
Max. pressure head of suds pump:	1 m

Electrical connection

► See identification plate **1**

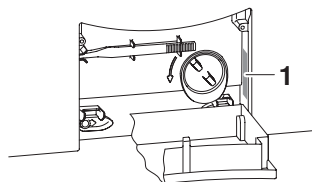




Spin speeds

400, 600, 800, 1000, 1200, 1400, 1600 rpm

Note for testing institutes

Set to the standard wash programme according to AS/NZS 2040.2:2005

- ▶ Select programme using the  button.
- ▶ Press the  button repeatedly until the following appears in the plain text display:
 - The plain text display changes to:
- ▶ Increase the spin speed to 1400 rpm by repeatedly pressing the  button.

40 °C Coloureds 1200 rpm	XhXX end YY:YY
-----------------------------	-------------------

Soiling normal	XhXX
-------------------	------

40 °C Coloureds normal	XhXX end YY:YY
---------------------------	-------------------

VAS Vibration Absorbing System

As the washing drum starts to spin, if the control system detects that the load is out of balance it will interrupt the spinning action once or more. The appliance tries thereby to distribute the load more evenly inside the washing drum. As the spin speed increases, if necessary the drum is actively balanced at all spin speed levels. In this way, during the spinning process draining is optimized whilst being as gentle as possible on the washing and the appliance.

Water and energy economy

During the first few minutes of a programme running, sensors automatically determine the type and the size of the load being washed. Water levels are then optimally adjusted to the wash load so that only the strict amount of water needed is used.

Turbidity sensor

In addition to the water and energy economy feature, the amount of water needed is optimized by a turbidity sensor.

With the help of the turbidity sensor, the control system detects the degree of dirtiness of the soapy water at any time in the cycle and from this determines the amount of water needed for the rest of the cycle.

For example, if only a low degree of dirtiness is detected during the first rinsing cycle, then the amount of water used for rinsing during the second rinsing cycle is reduced.

Automatic energy-saving stand-by

The appliance is equipped with automatic stand-by to avoid consuming energy unnecessarily.

All displays go out within minutes of a programme finishing. Energy consumption is reduced to an absolute minimum. The safety functions, however, remain activated.

Disposal

Packaging

- All packaging materials (cardboard, plastic film (PE) and polystyrene (EPS)) are marked and should, if possible, be collected for recycling and disposed of in an environmentally friendly way.

Disconnection

- Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician!


Safety

- Disable the appliance to prevent accidents caused by improper use, especially through children playing.
- Pull the plug out of the mains socket or have the appliance disconnected from the mains by a qualified electrician. Then cut off the mains cable.
- Remove or disable the lock on the appliance door.

Disposal

- The old appliance should not be discarded as worthless rubbish. If disposed of correctly, the raw materials can be recovered for recycling.



- The  symbol on the identification plate warns that the appliance may not be disposed of in normal household waste.
- The appliance must be disposed of in accordance with local regulations on waste disposal. For more information on the handling, disposal and recycling of the product, please contact the local authorities, the local recycling facilities for household waste or the retailer from whom you purchased the appliance.

Index

A

- Additional functions..... 11, 22
- Additional programmes..... 11, 16
 - Selecting 42
- Allergies..... 30
- Anti-mite..... 20, 43
- Appliance
 - Construction 10
 - Description 9
 - Hygiene 14
 - Preparing 36
- Appliance door..... 10
 - Cannot be opened..... 58
 - Checking the door seal..... 49
 - Opening during operation 46
 - Opening in event of power failure 60
- Automatic door opener..... 34, 48

B

- Bio wash..... 21, 45

C

- Capacity..... 9
- Care..... 50
- Childproof lock..... 33, 47
- Circulation nozzle 10
- Cleaning
 - Detergent dispenser drawer . 50
 - Foreign body trap..... 52
 - Siphon 50
 - Water inlet filter..... 50
- Cold wash 22
- Colour run 65
- Coloureds..... 14
- Communications interface 12
- Consumption data 15

D

- Damage to fabrics 65, 66
- Degree of soiling..... 20, 43
- Delayed start..... 22, 38, 45
- Deposits on washing..... 64
- Detergent dispenser drawer 10, 67
 - Cleaning 50
 - Traces of fabric conditioner 59
 - Traces of washing detergent..... 58
- Detergent dosage 39
- Disconnection 71
- Display
 - A2, A5, A9 53, 54
 - F.. See instructions..... 55
 - Formation of foam 56
 - Programme extended 56
- Display elements 11
- Disposal 71
- Door opener
 - Automatic 34, 48
- Door seal
 - Checking 49
- Drain tray 10, 67
- Dyeing 40

E

- Easy care..... 16, 42
- Emergency door release 10
- Emergency door release tool 10, 60, 67
- Emergency draining..... 51
- End of the wash day..... 49
- Energy consumption..... 15
- Energy economy 62, 70
- Extra programmes 14

F

- Fabric care symbols..... 61
- Fabric conditioner 10, 39
 - Traces of fabric conditioner... 59
- Fabric type..... 18
 - Selecting..... 42
- Fabric wear 66
- Factory settings 35
- Favourites 14, 23
 - Changing..... 24
 - Defining 23
 - Deleting 25
 - Starting 24
- Foreign body trap 10, 52, 67
 - Cleaning 52

H

- Hand wash 14
- Holes in washing..... 66

I

- Identification plate..... 10, 75
- Indicator lights 12

L

- Language..... 28
- Liquid detergent 38
- Liquid detergent flap 10, 67
- Load capacity 15
- Loosening up the washing 48

M

- Main programmes..... 11, 14
 - Selecting..... 41
- Main wash detergent..... 10
- Maintenance..... 50
- Model no..... 2

N

- Net curtains 62
- Night economy programme 17, 42

O

- Operating elements..... 11

P

- Packaging 71
- Plain text display..... 12
- Powder detergent..... 38
- Power failure..... 60
- Pressure reduction valve..... 67
- Pre-wash..... 16, 42
- Pre-wash detergent 10
- Programme
 - Aborting 46
 - Duration 15
 - End..... 22, 48
 - Overview 14
 - Selecting 41
 - Taking significantly longer..... 56
- Proofing 14

Q

- Quick instructions..... 76
- Quick operating instructions..... 10, 67
- Quick wash 22

R

- Repair service 75
- Rinsing..... 30
- Rinsing performance
 - Unsatisfactory 65

S	
Safety	71
Safety precautions	
Before using for the first time	5
Children in the home	7
Correct use	6
Maintenance	8
Note on use	7
Separate rinsing/spinning... ..	21, 45
Siphon for fabric conditioner	10, 67
Cleaning	50
Skin protection	30
Soaking	20, 43
Setting duration	43
Soap detergent	40
Soap wash	21, 45
Soft water	31
Softener	10, 39
Spare parts	67
Spin speed	15, 22, 68
Changing	44
Sport	16, 42
Stains	65
Stand-by	
Energy-saving	70
Steam anti-crease	14, 17, 42
Stop after rinsing	44
Symbols	2
T	
Tears in washing	66
Technical data	68
Temperature	
Changing	44
Setting	22, 44
Testing institutes	69
Time	29
Transport lock	13
Trouble-shooting	53
Turbidity sensor	70
Type	2
Type of wash	14
U	
Unsatisfactory wash results	63, 64
User settings	26
Using for the first time	5, 13
V	
VAS Vibration Absorbing System	70
Vibrating	57
W	
Wash results	
Unsatisfactory	63, 64
Washing	36
Adding washing detergent... ..	38
Changing selection	46
End of programme	48
Loading	37
Preparing the appliance	36
Programme selection	41
Spinning unsatisfactory	57
Washing detergent	
Adding	38
Washing tips	61
Water consumption	15
Water economy	62, 70
Water hardness	39
Water inlet filter	
Cleaning	50
Water outlet hose	67
WetClean	14
Whites	14
Woollens	14

Repair service



The 'Trouble-shooting' section will help you to carry out small repairs yourself, saving you the time and trouble of calling out a service engineer and the cost that goes along with it.

Whether you contact us about a malfunction or an order, please always state the serial number (FN) and the model type of your appliance. Enter these details below and also on the service sticker which comes with the appliance. Stick it in a conspicuous place or in your telephone or address book.

FN


Appliance

You will also find the same details on the certificate of guarantee, the original sales invoice and the identification plate of the appliance.


- ▶ Open the drain tray.
 - The identification plate is located on the right-hand side next to the foreign body trap.

Quick instructions

Please first read the safety precautions in the operating instructions!

- ▶ Switch on the appliance and turn on the water tap
- ▶ Open the appliance door by pressing the  button
- ▶ Load the washing and then close the appliance door
- ▶ Pull the detergent dispenser drawer out and add the washing detergent
- ▶ Push the detergent dispenser drawer back in
- ▶ Select wash programme
- ▶ If required, select additional programmes / functions
- ▶ The appliance starts automatically after about 20 seconds

When the programme has finished:

- ▶ Press the  button and unload the washing

At the end of the wash day:

- ▶ If necessary, clean the detergent dispenser drawer
- ▶ Push the appliance door to, but do not close

V-ZUG Ltd

Industriestrasse 66, CH-6301 Zug

vzug@vzug.ch, www.vzug.com



J267.360-1